




SEGWAY

SEGWAY AT6 ACCESSORIES INSTALLATION MANUAL



FRONT AND REAR STORAGE BOXES

FRONT AND REAR STORAGE BOXES

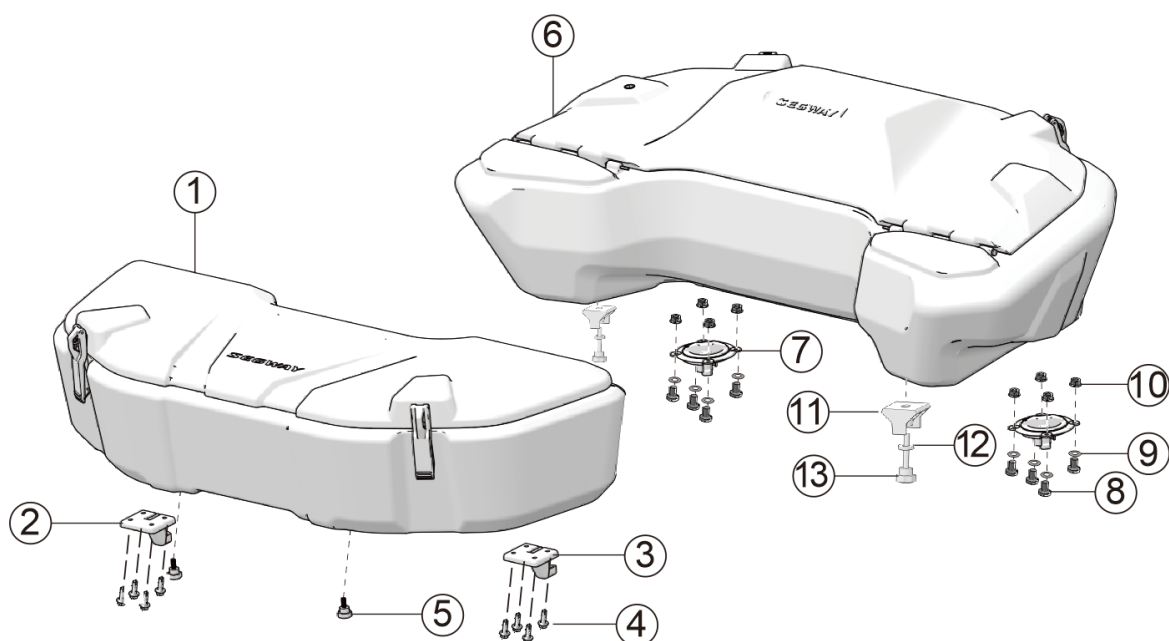

CALLOUT	PART NAME	PART NUMBER	QTY	APPLICABLE MODELS
1	FRONT STORAGE BOX	A02H0005001	1	
2	FR PIN	A02H17500001	1	
3	FL PIN	A02H17400001	1	
4	HEXAGON FLANGE BOLT M6×12	GBT005789006	8	
5	LOCKED NUT	A02H17800001	2	
6	REAR STORAGE BOX	A02H18000001	1	
7	SELF-LOCKING MECHANISM	A02H18100001	2	
8	CROSS RECESSED HEXAGON BOLTS M6×16	BT000818012	8	
9	GASKET M6	GBT000971002	8	
10	HEXAGON FLANGE BOLT M6	GBT061771002	8	
11	CARGO BOX BUFFER	A02H18900001	2	
12	GASKET 18x5x4	A02-H270000-0B0-00	2	
13	BOLT M6*40	A02-H178001-000-00	2	


FRONT AND REAR STORAGE BOXES

TIPS

Storage boxes can only be installed on vehicles equipped with shelf covers

INSTALLATION OF THE FRONT STORAGE


1. Install the FL pin and the FR pin on the bottom of the front storage box with 4 pieces of M6×12 hexagonal flange bolts. Torque value: **8~12N·m (0.8~1.2 kgf·m, 69~103.6 in·Lb)**.

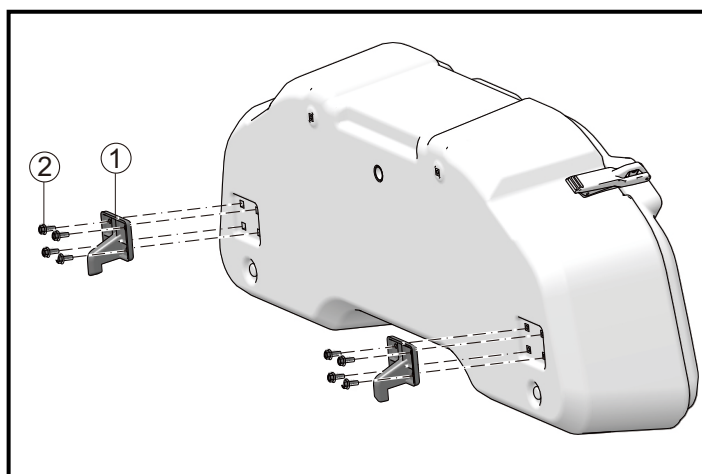


NOTICE

Please pay attention to the front and back direction of the pins when installing.


The pins are symmetrical parts, please pay attention when installing.

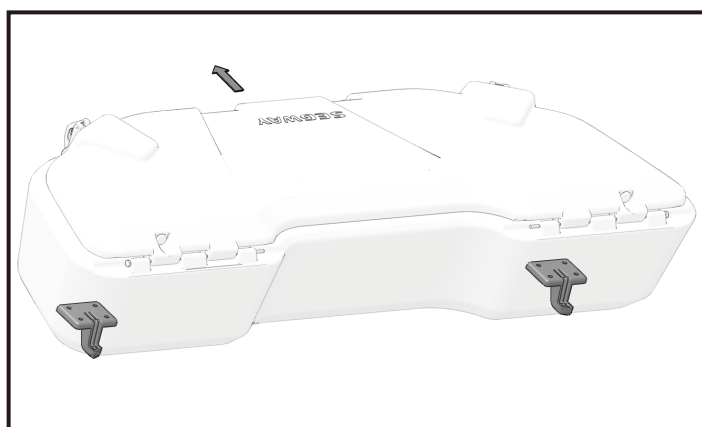

2. Place the front storage box on a suitable position on the front shelf cover, insert the two pins of the storage box into the corresponding fixing slots of the front shelf, and push the storage box until it can no longer be pushed.

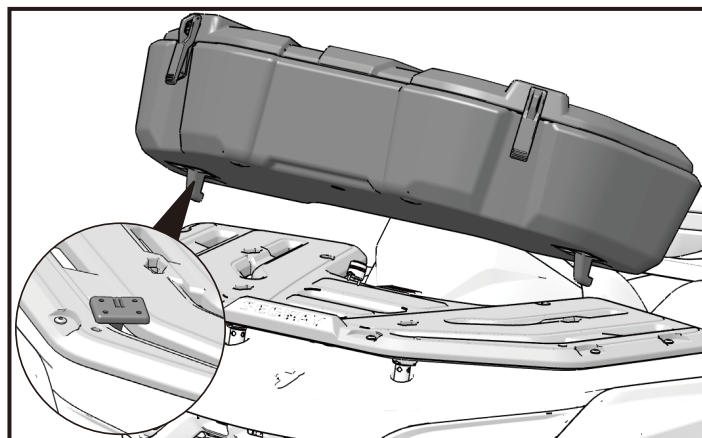

3. Use 2 pieces of lock nuts to lock and fix the front storage box from the bottom of the shelf.

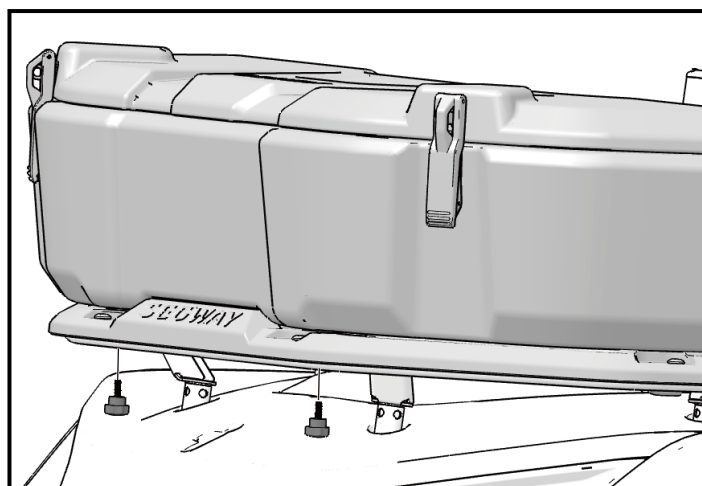


FRONT AND REAR STORAGE BOXES

TIPS


Storage boxes can only be installed on vehicles equipped with shelf covers

INSTALLATION OF REAR STORAGE BOX

1. Loosen the locking bolt at the bottom of the seat back and take off the seat back.

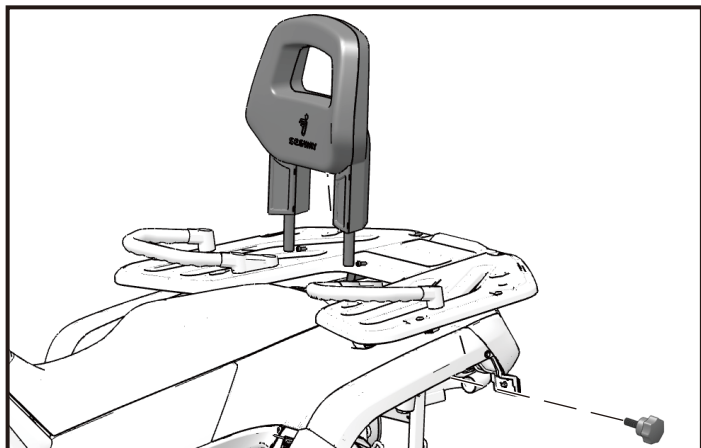


2. Take out the self-locking mechanism, turn the rotary handle on the self-locking mechanism, and turn the side with "△" on the rotary handle to the "🔒" position.

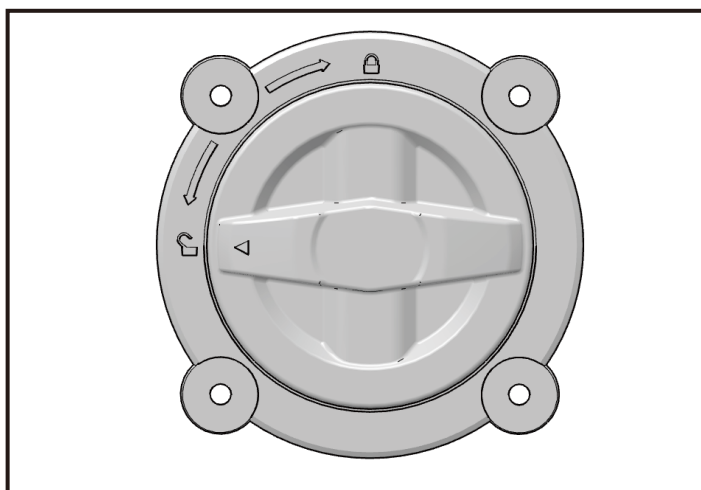


3. Use cross recessed hexagon bolts M5×16, washers and nuts to fix the self-locking mechanism in the rear storage box.

NOTICE

Pay attention to the installation and fixing direction of the self-locking mechanism

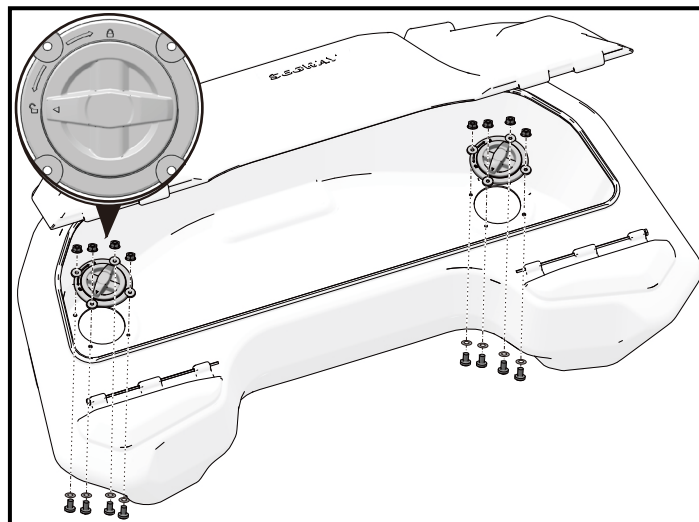

4. Place the storage box with the self-locking mechanism on the rear shelf of the vehicle, and the self-locking mechanism is aligned with the fixed position of the shelf cover.

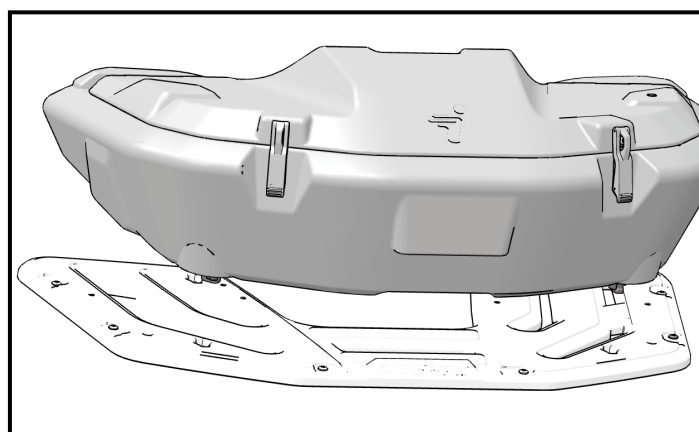

5. Twist the rotary handle on the self-locking mechanism, turn the side with "△" on the rotary handle to the "🔒" position, and fix the rear of the storage box on the shelf.

