




SEGWAY

SEGWAY AT6 ACCESSORIES INSTALLATION MANUAL



HEATED SEAT CUSHION (AT6 L / AT6 S)

HEATED SEAT CUSHION ASSEMBLY DIAGRAM

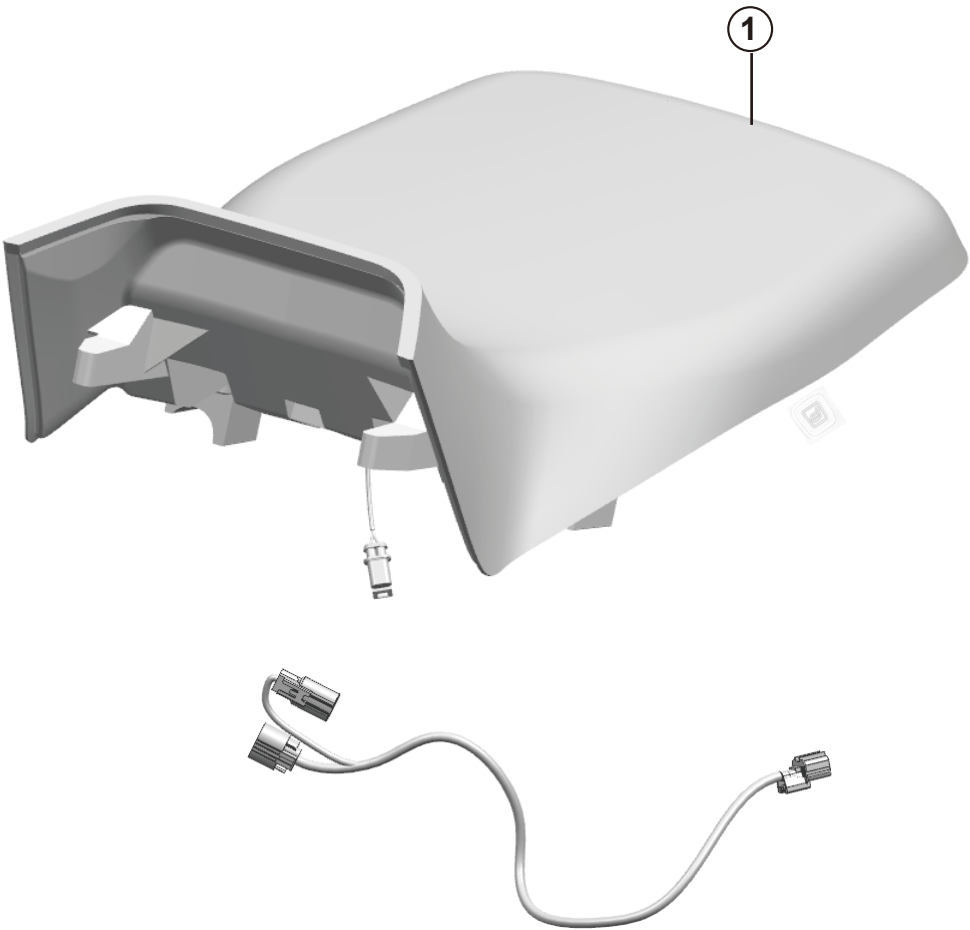


ITEM	PART NAME	PART NUMBER	QTY	REMARKS
1	Heated Short Seat CushionAssembly	A01-K110000-000-00		Applicable to AT6 S
	Heated Long Seat Cushion Assembly	A02-K110000-000-00		Applicable to AT6 L

TIPS


This installation guide applies to multiple models. Illustrations may vary slightly from the actual vehicle. Always refer to the actual vehicle.

HEATED SEAT CUSHION (AT6 L / AT6 S)




1. The seat cushion is a clip-retained quick-release component. Hook a finger under the seat latch and lift upwards. Once the seat cushion releases, lift it up and remove it. If a wiring harness is disconnected beneath the seat cushion, disconnect the connector.

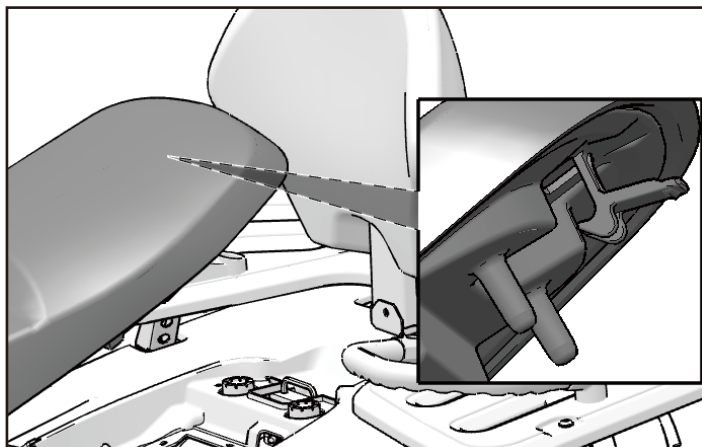


2. Disconnect the DC socket connector from the wiring harness. The DC socket power connector is located beneath the air cleaner cover.

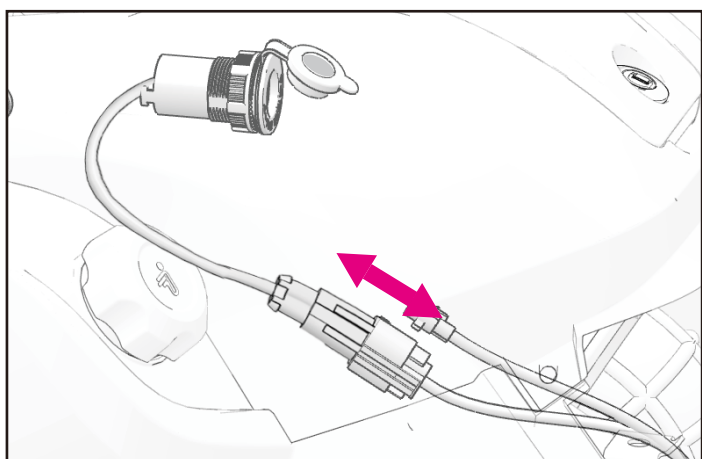

3. Connect the heated seat cushion adaptor harness to the DC connector as shown below.

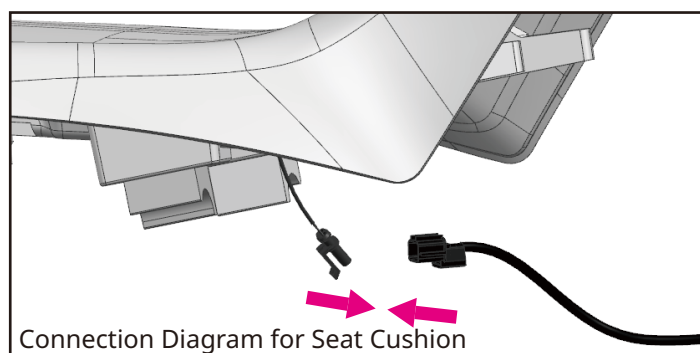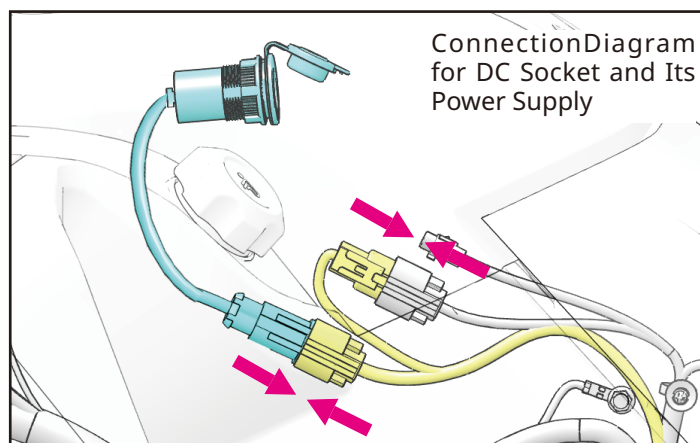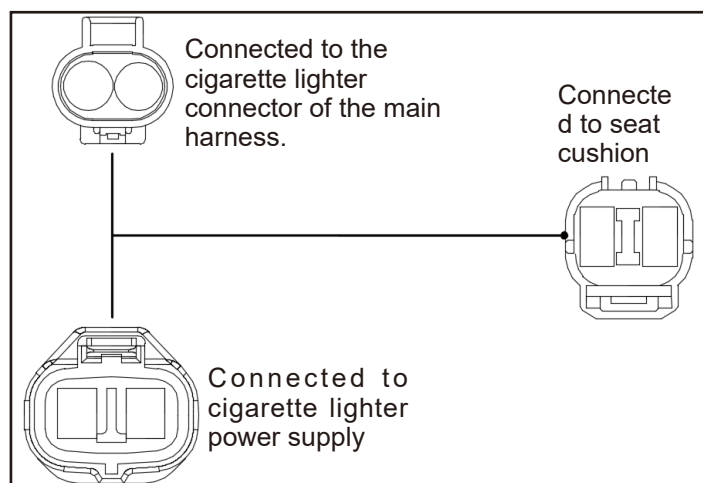

4. Insert the front tab of the seat cushion into the U-shaped bracket welded to the frame. Push the seat firmly forwards and press it down to lock it in place.

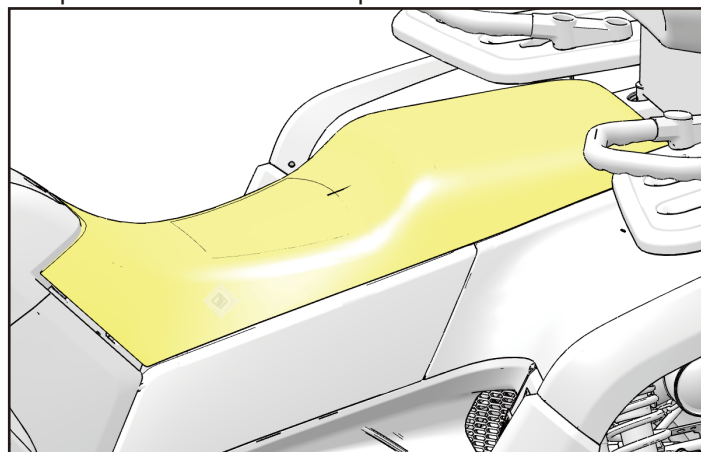

5. Start the vehicle and check the heated seat cushion operates correctly. The heated seat cushion switch is located on the left-hand side of the seat cushion. Press and hold the button for 2 seconds to switch on the heating. The red indicator illuminates by default. Press the button once to switch between the red and blue indicators. Press and hold the button for 2 seconds to switch off.

