





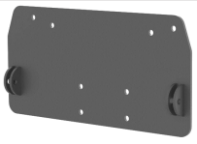







Center mounting kits examples, ask for more models.

	Code	Name	Fits	Fits	Fits
	03-4000	Center mounting kit Super universal Ø10 mm pins	Super universal	Fits for most ATV's with tubular type of chassis/frame. Example Honda, Suzuki, Yamaha, Linhai.	Make sure the suitability of ATV.
	03-11300	Center mounting kit CF MOTO Ø10 mm pins	CFORCE 600 (2020+) CFORCE 600 Touring (2020+) CFORCE 625 CFORCE 625 Touring		
	03-11500	Center mounting kit Polaris Ø10 mm pins	Scrambler XP 1000 S Sportsman 1000 S		
	03-5000	Center mounting kit Polaris Ø10 mm pins	Polaris Sportsman 450/570/ETX / 570 SP / Ohlins		
	03-3500	Center mounting kit CanAm G2 Ø10 mm pins	Outlander 6x6 (2013-2016) Outlander 6x6 (2019+) Outlander 6x6 MAX (2017-2018) Outlander 6x6 MAX (2019+) Outlander G2 (-2016) Outlander G2 450/570 (2017+) Outlander G2 450/570 MAX (2017+) Outlander G2 650/850/1000 (2017-2018) Outlander G2 650/850/1000 (2019+)	Outlander G2 L MAX Outlander G2 MAX (-2016) Outlander X MR 1000 (-2016) Outlander X MR 1000 (2017-2018) Outlander G2 650/850/1000 MAX (2017-2018) Outlander G2 650/850/1000 MAX (2019+) Outlander G2 L	Outlander X MR 1000 (2019+) Outlander X MR 650/800/850 (-2016) Outlander X MR 650/850 (2017-2018) Outlander X MR 650/850 (2019+) Renegade G2 (-2016) Renegade G2 (2017-2018) Renegade G2 (2019+) Renegade X MR (-2016) Renegade X MR (2017-2018) Renegade X MR (2019+)
	03-5400	Center mounting kit Polaris Ø10 mm pins	Polaris 570 Touring X2 6x6 Big Boss		

Center mounting kits examples, ask for more models.

	Code	Name	Fits	Fits	Fits
	03-1700	Center mounting kit Polaris Ø10 mm pins	Scrambler 850/1000 (-2014) Scrambler 850/1000 (2015+) Sportsman 1000 (-2016) Sportsman 1000 (2017+) Sportsman 550 Sportsman 850 (-2014) Sportsman 850 (2015+)	Sportsman Touring 550 Sportsman Touring 850 (-2014) Sportsman Touring 850 (2015+) Sportsman Touring XP 1000 (-2017) Sportsman Touring XP 1000 (2018+)	
	03-9400	Center mounting kit Kymco Ø10 mm pins	MXU 700 (-2019) MXU 700 (2020+)		
	03-8500	Center mounting kit CF MOTO Ø10 mm pins	CFORCE 1000 CFORCE 850		
	03-12500	Center mounting kit Segway Ø10 mm pins	Snarler AT6 L AT6 S		
	03-5100	Center mounting kit Polaris Ø10 mm pins	Ranger 570 (-2014) Ranger 570 (2015+)		
	03-6600	Center mounting kit CF Moto Ø10 mm pins	CFORCE 450/520-L CFORCE 450/520-S CFORCE 550 CFORCE 600 Cobalt / Iron Cobalt / Iron MAX		