




SEGWAY

SEGWAY SX10 ACCESSORIES INSTALLATION GUIDE



PC FRONT HALF WINDSHIELD ASSEMBLY

PC front half windshield

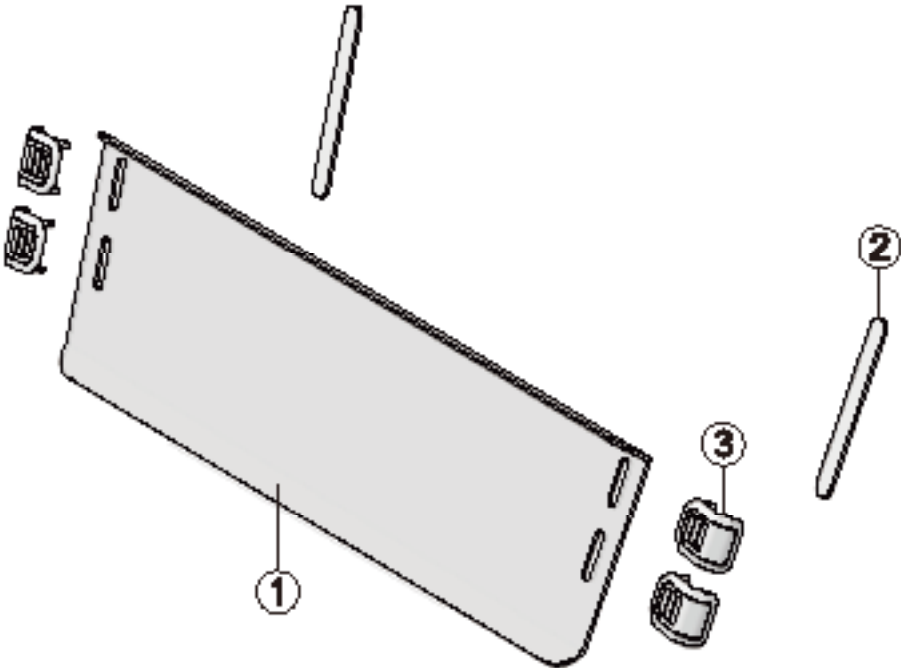


NO.	PART NAME	PART NUMBER	QUANTITY	APPLICABLE MODELS
1	PC FRONT HALF WINDSHIELD	S01R20101002	1	
2	WINDSHIELD BUFFER	S01R20104001	2	
3	WINDSHIELD STRAP	S01R20103001	4	

PC FRONT HALF WINDSHIELD ASSEMBLY

PC FRONT HALF WINDSHIELD INSTALLATION

1. Tear off the protective film on both sides of the front half windshield

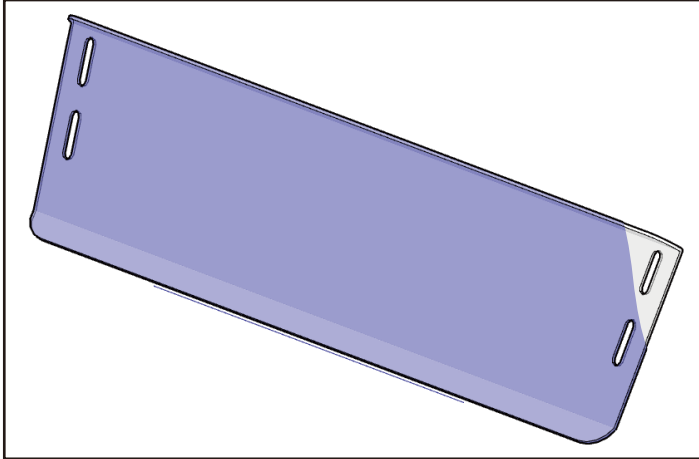


TIPS

Be careful not to scratch the surface of windshield when tearing off the protective film.


2. Tear off the protective film of the windshield buffer , and stick the windshield buffer on both sides of the half windshield.

TIPS

When pasting, pay attention to the pasting surface to prevent reverse pasting.

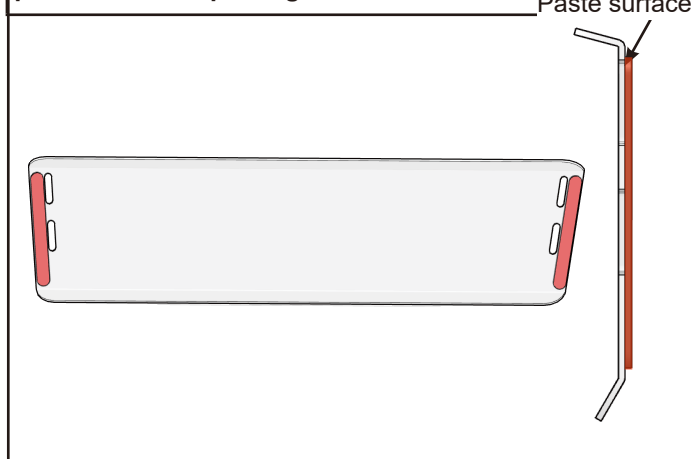

3. Place the half windshield in a suitable position on the left (right) side tube of the vehicle roof beam.

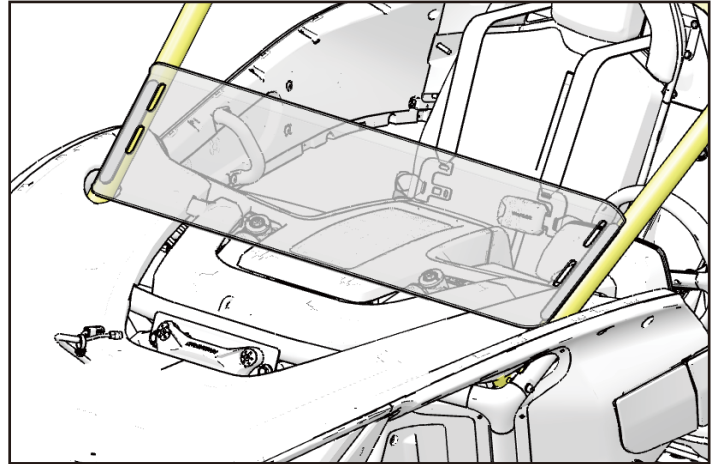

4. Use 4 pieces of straps to fix the half windshield to the appropriate position on the left (right) side tube of the top beam respectively.

