




SEGWAY

SEGWAY SX10 ACCESSORIES INSTALLATION GUIDE



POLYCARBONATE FRONT WINDSHIELD

Polycarbonate Front Windshield

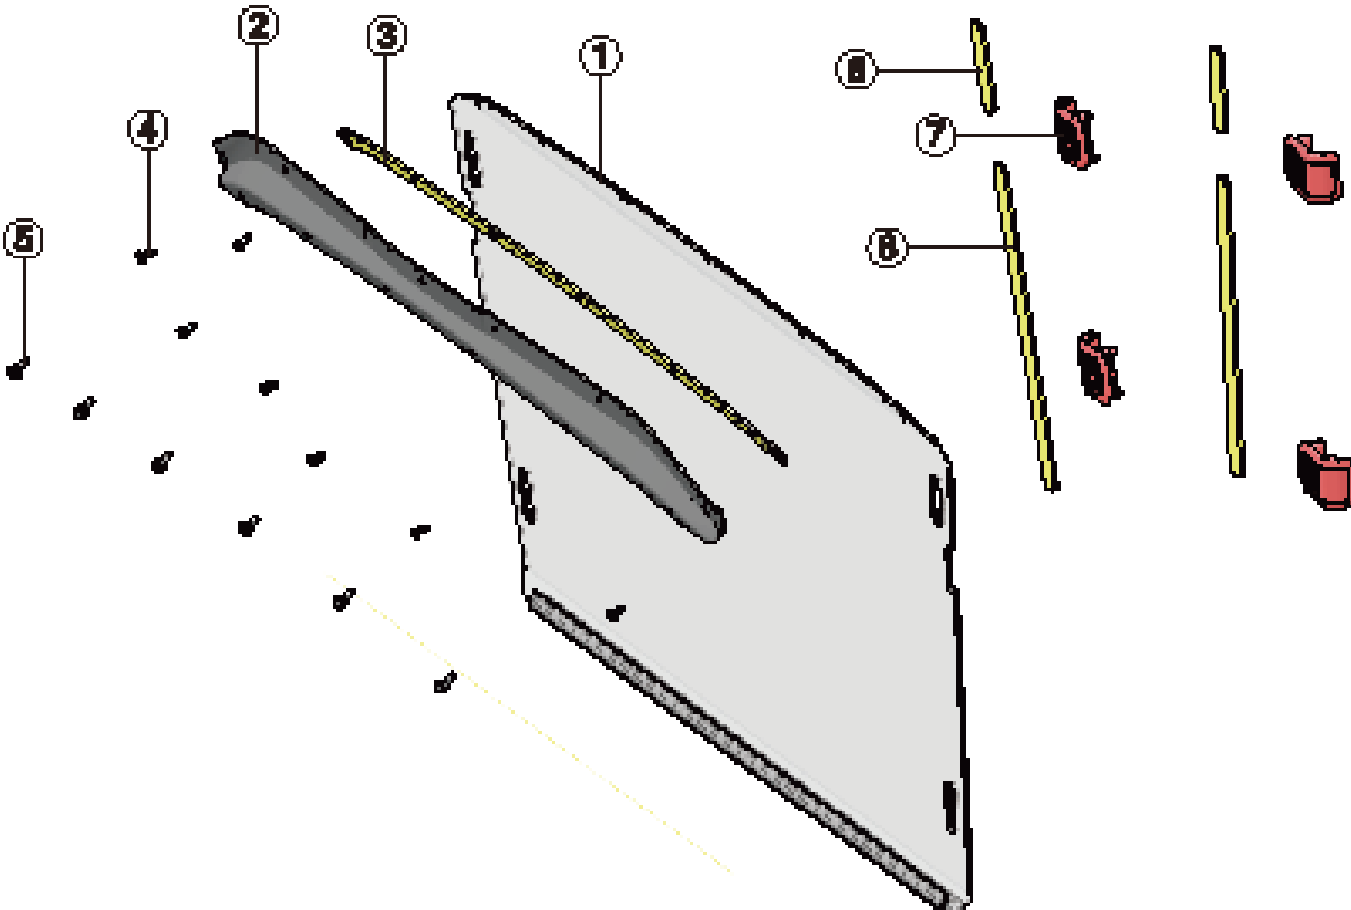

NO.	PART NAME	PART NUMBER	QUANTITY	APPLICABLE MODELS
1	FRONT WINDSHIELD	S05-R102001-000-00	1	
2	WINDSHIELD UPPER CONNECTING PLATE	S05-R102002-0B0-00	1	
3	WINDSHIELD UPPER BUFFER BLOCK	S05-R102003-0B0-00	1	
4	EXPANSION BUCKLE ASSEMBLY	T04000003001	7	
5	BOLT M6×20	T03000007001	6	
6	UPPER BUFFER BLOCK	S05-R102005-0B0-00	2	
7	GLASS FAST STRAP	S01R20103001	4	
8	SIDE BUFFER BLOCK	S05-R102004-0B0-00	2	


POLYCARBONATE FRONT WINDSHIELD

FRONT FULL WINDSHIELD INSTALLATION


TIPS

During installation, protect the glass surface to avoid scratching


1. Place the windshield assembly on the left (right) side tube of the vehicle roof beam at a suitable position.

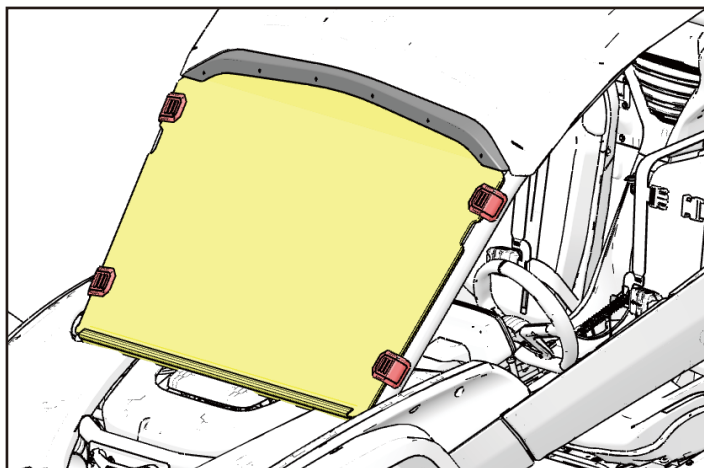

2. Tighten 4 pieces of glass fast straps to fix the windshield on the side tube of the top beam.

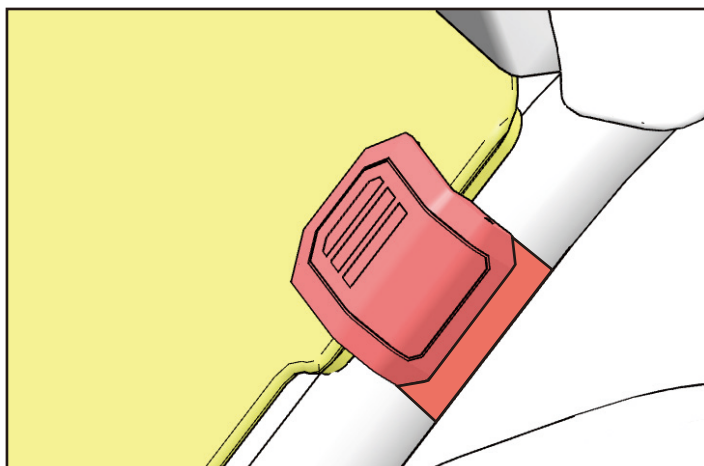

3. Use an electric drill to drill holes on the windshield connecting plate and the ceiling.

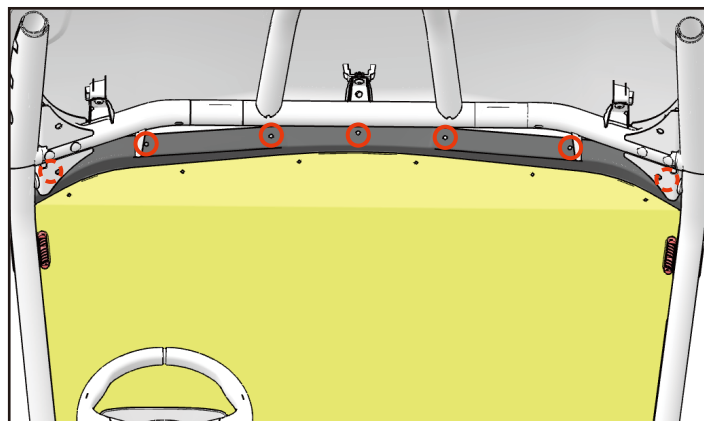

4. Use the expansion buckle assembly to fix the upper connecting plate of the windshield with the ceiling.

