




SEGWAY

SEGWAY UT10 ACCESSORIES INSTALLATION MANUAL



FRONT HALF WINDSHIELD ASSEMBLY

Front Half Windshield Assembly

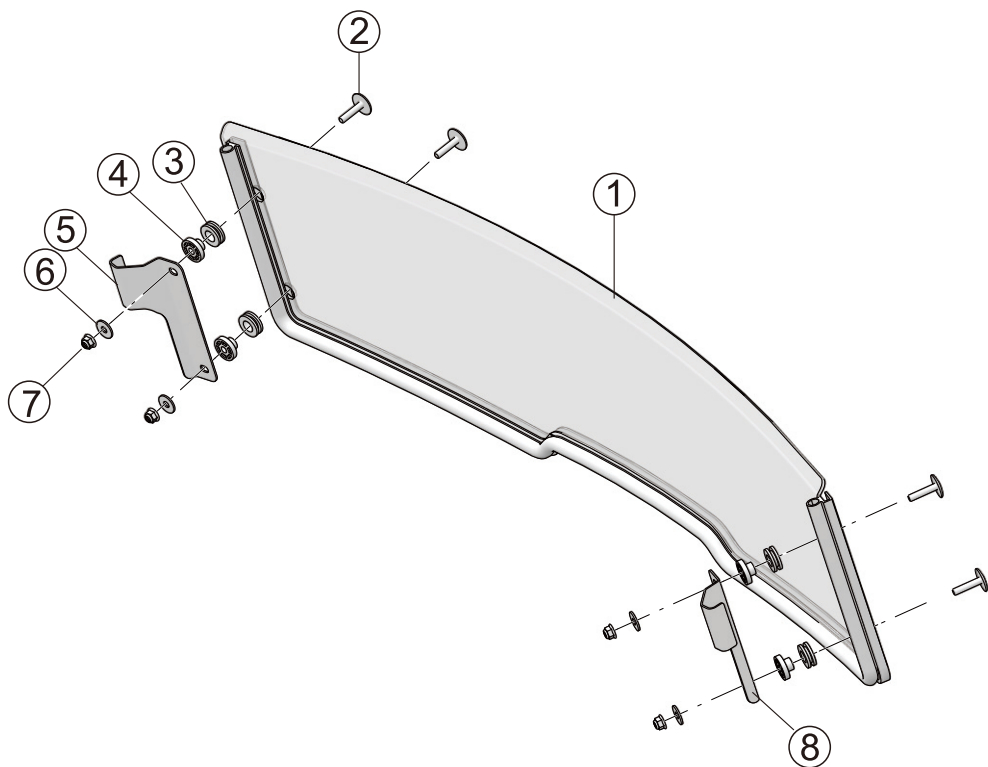

NO.	PART NAME	PART NUMBER	QUANTITY	REMARKS
1	Half windscreen	U01R61002002	1	
2	Windshield big flat head screw M8 × 35	T03000009002	4	
3	Rubber compressor grommet	T00000004001	4	
4	Rubber panel grommet	U01R62003001	4	
5	Left bracket	U01-R152000-FB0-00	1	
6	Large washer	GBT000961003	4	
7	Flanged lock nut	GBT061831003	4	
8	Right bracket	U01-R153000-FB0-00	1	


FRONT HALF WINDSHIELD ASSEMBLY

FRONT HALF WINDSHIELD INSTALLATION


TIPS

Avoid scratching the glass surface during installation.


1. Clip the four hole positions of the half windshield into the windshield I-shaped rubber pad, and then clip the rear windshield pad into the I-shaped rubber pad (the pad is located inside the glass)

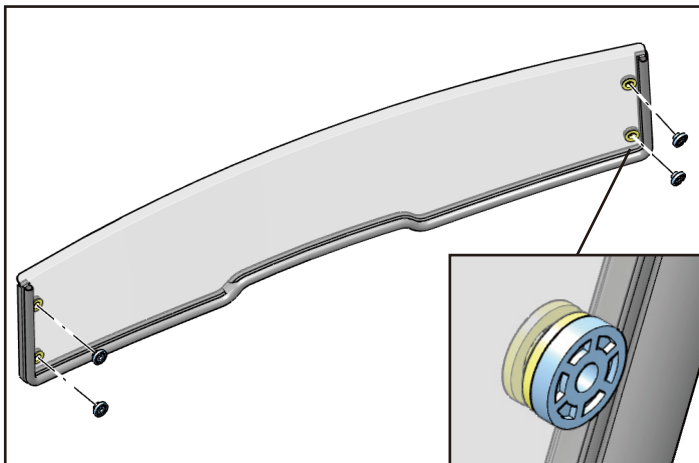

2. Place the front half windshield at the groove of the left and right A-pillar tubes, and the lower edge is fitted with the lower part of the front panel of the vehicle.

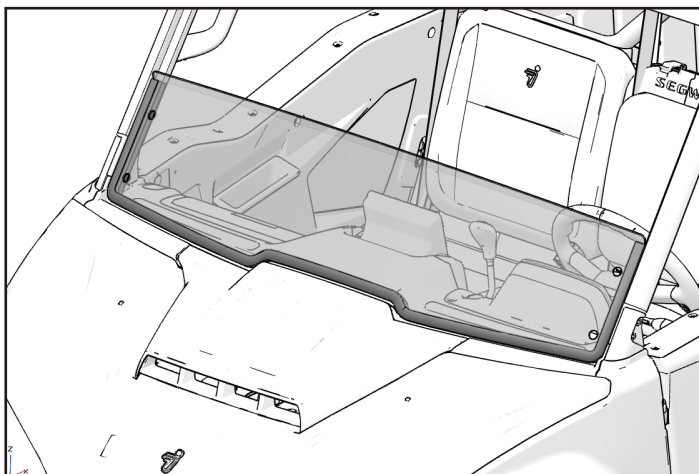


3. Clamp the left (right) quick release bracket to the A-pillar pipe, and align the mounting hole with the hole of the glass cushion sleeve.

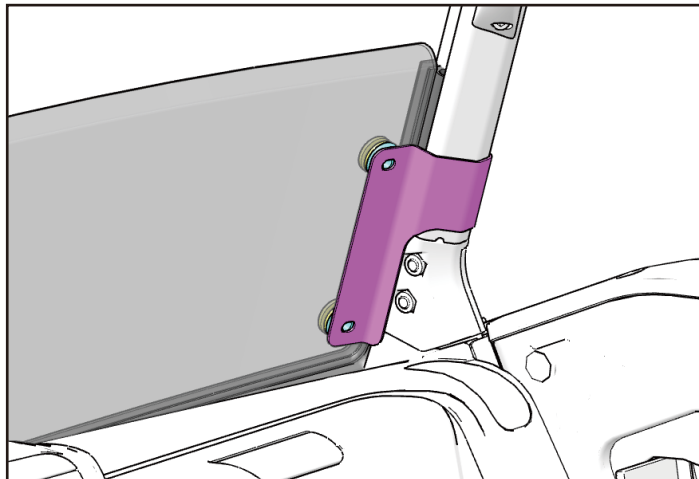

4. Use M8×35 large flat head screws, nuts and washers to install and fix the half windshield assembly and the holes on the bracket.

Torque value: 8~15N · m (0.8~1.5kgf · m, 6~11ft · lb)

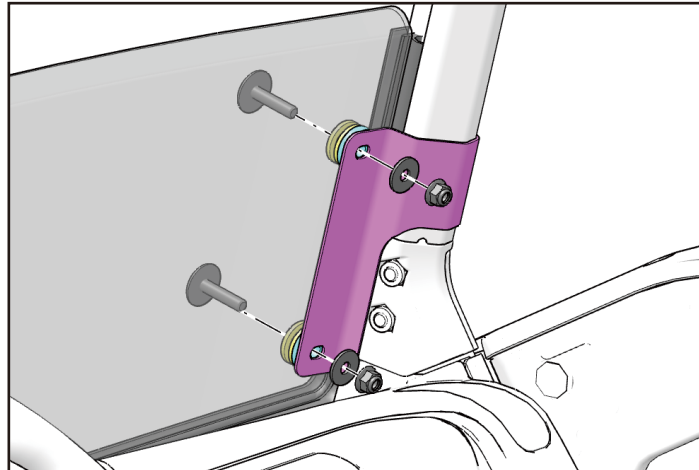

5. Tighten all fixing bolts