




SEGWAY

SEGWAY UT10 ACCESSORIES INSTALLATION MANUAL



SIDE DOOR SAFETY NET ASSEMBLY


Side Door Net Assembly — Assembly Diagram

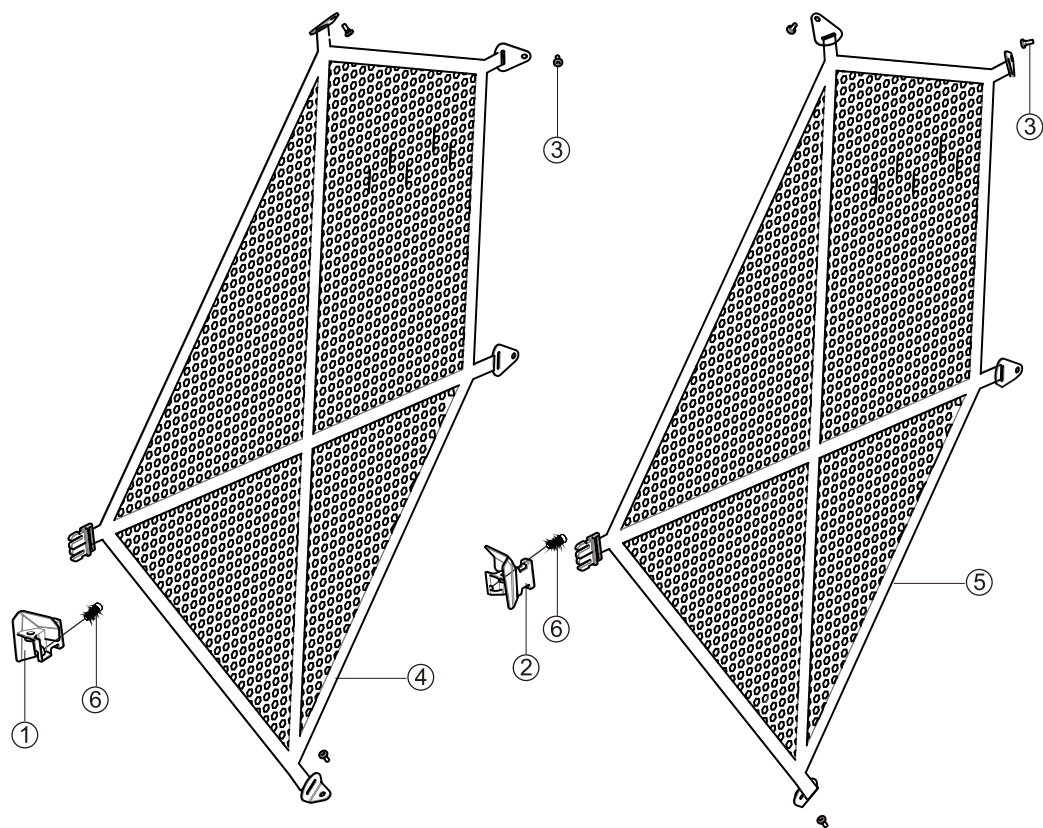

NO.	PART NAME	PART NUMBER	QUANTITY	REMARKS
1	Net Door Latch, Right	U01R52101002	1	
2	Net Door Latch (Left)	U01R52101001	1	
3	M6 Shoulder Bolt	U01F10001001		
4	Right Side Door Net Assembly	U01R52100002		
5	Left Side Door Net Assembly	U01R52100001		
6	M6 × 20 Hexagon Socket-Head Cap Screw	GBT000701011	2	

INSTALLING THE SIDE DOOR NET ASSEMBLY

1、Secure the left/right net door latches to both sides of the front instrument cover.

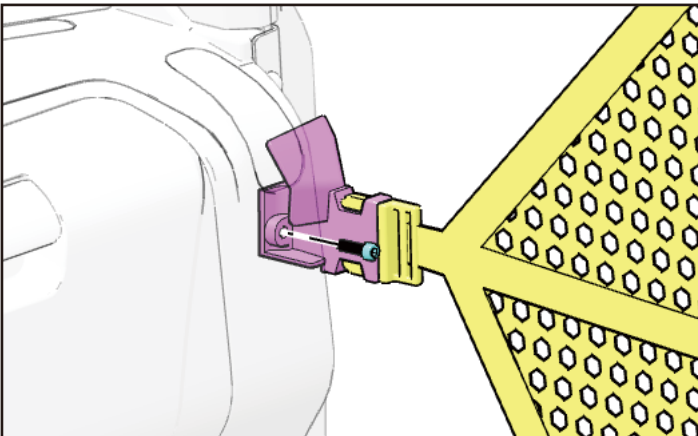

2、Secure the remaining mounting ends of the net to the corresponding positions using bolts, and install the foot guard.

