




SEGWAY

SEGWAY UT6 ACCESSORIES INSTALLATION MANUAL



FRONT WINDSHIELD ASSEMBLY INSTALLATION GUIDE

Front windshield assembly drawing

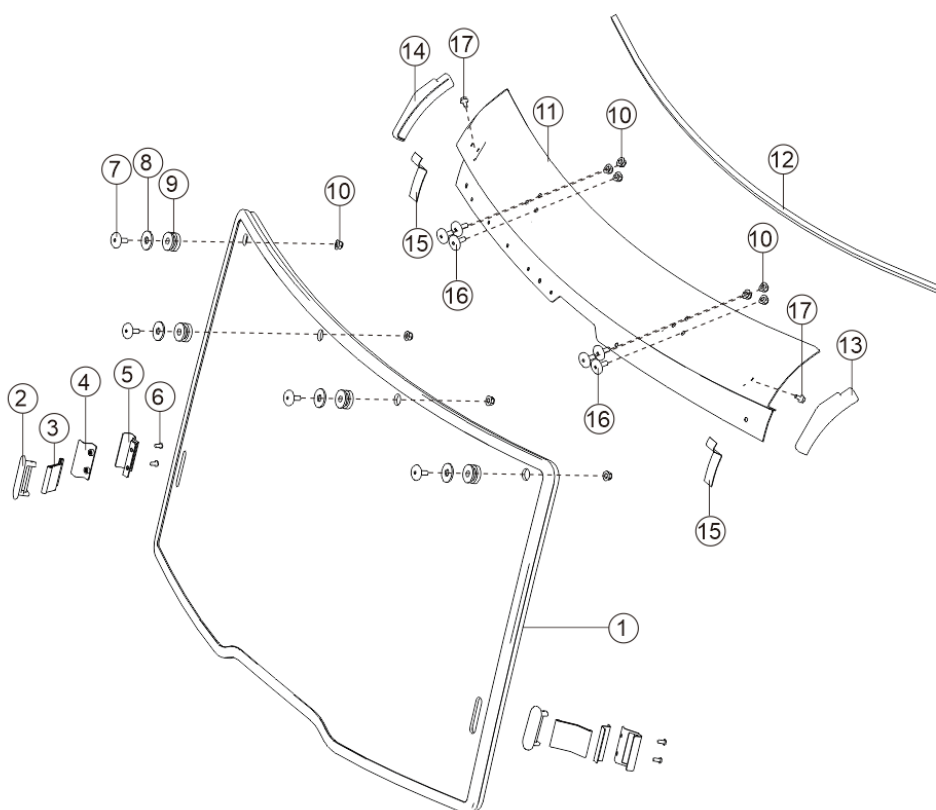

NO.	PART NAME	PART NUMBER	QUANTITY	REMARKS
1	Front windscreen	U06-R061000-000-00	1	
2	Velcro plastic buckle	U01R64021001	2	
3	Side Velcro	U01R64032001	2	
4	Velcro side fixed pipe clamp 2#	U01R64042001	2	
5	Velcro side fixed pipe clamp 1#	U01R64041001	2	
6	Hexagon socket flat round head screw M6 × 12	GBT000702001	4	
7	Windscreen large flat head screw M8 × 30	T03000009003	4	
8	Large washer Class A 10	GBT000961004	4	
9	Front windshield I-shaped rubber pad	T00000004002	4	
10	Non-metallic insert hexagon flange lock nut M8	GBT061831003	10	
11	Front windshield mount	U06-R060101-0MP-00	1	
12	Front windshield mount seal	U06-R060104-0B0-00	1	
13	Rubber Pad, Front Windshield Mount-Left	U06-R060102-0B0-00	1	
14	Rubber Pad of Front Windshield Mount-Right	U06-R060103-0B0-00	1	
15	Waterproof rubber pad	U03-R061105-0B0-00	2	
16	Hexagon flange bolt M8 × 16	GBT005789014	6	
17	Hexagon flange bolt M6 × 16	GBT005789007	2	


⚠ CAUTION

This installation instruction is suitable for many models, the illustration may be slightly different, please use the actual vehicle.


FRONT WINDSHIELD ASSEMBLY INSTALLATION GUIDE

FRONT WINDSHIELD INSTALLATION (FULL BLOCK)


1. Paste the sealing strip of the front windshield mounting seat in the ceiling.

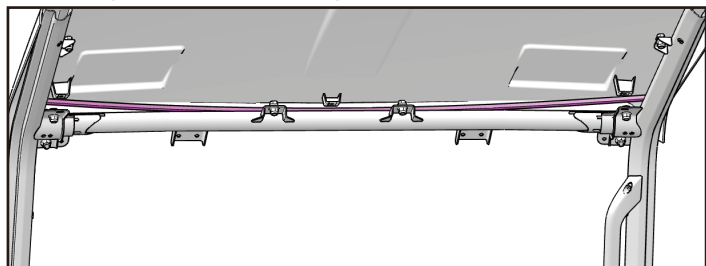

2. Tear off half of the protective film of the waterproof rubber pad and paste it at the bend of the front windshield mounting seat. Then install the rubber pad of the front left (right) windshield mount on both sides of the front windshield mount.

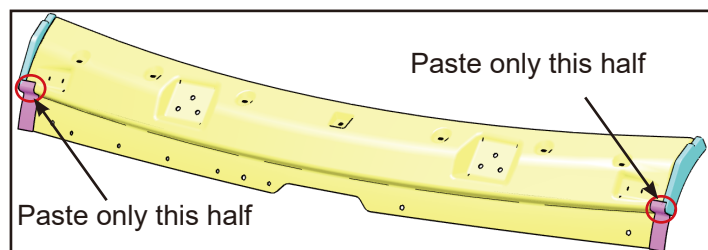


3. Then place the front windshield mounting seat at the corresponding position of the ceiling, tear off the protective film of the other half of the waterproof rubber pad and paste it on the front windshield mounting seat.

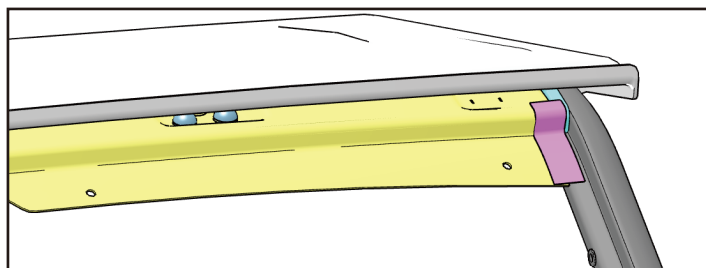


4. Install the following bolts


- ① Hexagon flange bolt M6 × 16(4 pieces)
- ② Hexagon flange bolt M8 × 16(6 pieces)
- ③ Nut M8(6 pieces)

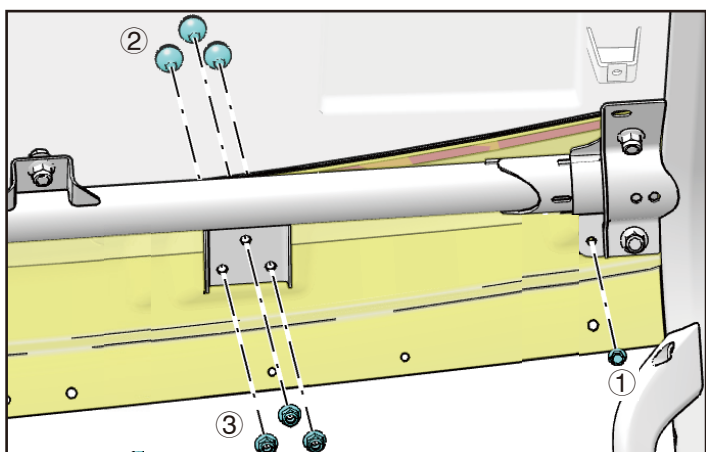

5. Place the windshield in a suitable position, and use the windshield large flat head screw M8 × 35, large washer Class A 10, I-shaped rubber pad, and nut to sequentially install the windshield assembly and the front windshield mounting seat. The hole is installed. Torque value: 30 ~ 40N · m(3.0~4.0kgf · m ,22.1~29.5ft · lb)

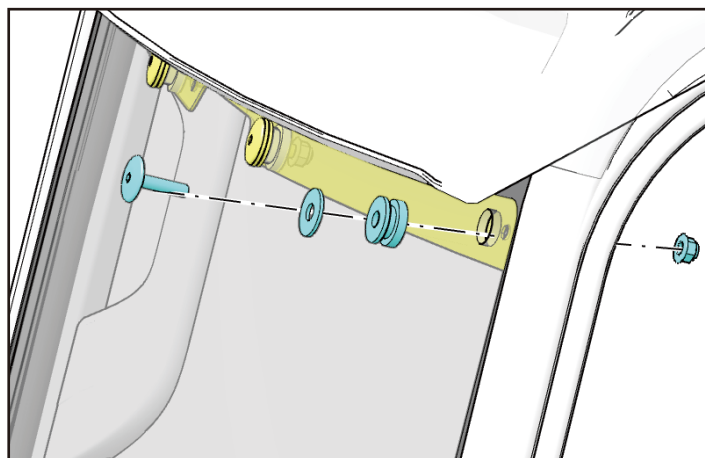

6. Fix the hook and loop side fixing pipe clamp ① and the hook and loop side fixing pipe clamp ② on the pillar pipe beams on the left and right sides of UTV with hexagon socket flat round head screws M6 × 12, and the position is basically the same as the installation holes of the full windshield body in front of PC (two holes on the left and two holes on the right). The torque value is 8 ~ 15N · m(0.8 ~ 1.5kgf · m , 6 ~ 11ft · lb).

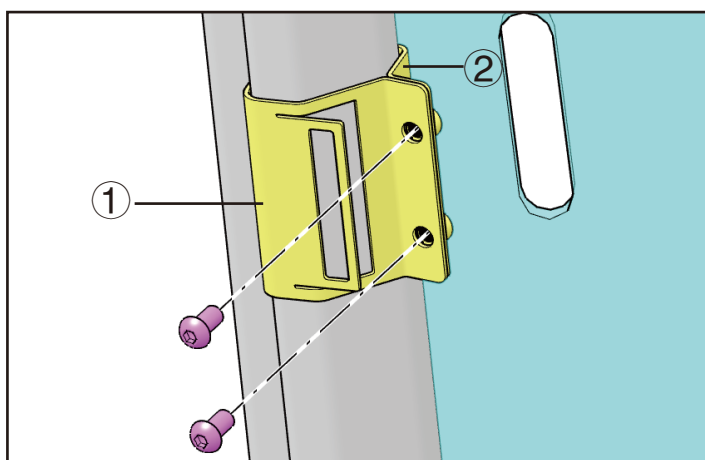

7. Pass the Velcro plastic buckle ③ through the hole on the windshield, and then use the side Velcro ④ to tighten and fix the Velcro side fixing pipe clamp and the Velcro plastic buckle.

