SEGWAY

SEGWAY UT10
ACCESSORIES INSTALLATION MANUAL




segwaypowersports.com

V2.0

HALF DOOR NET CLOTH ASSEMBLY

Half door net cloth assembly

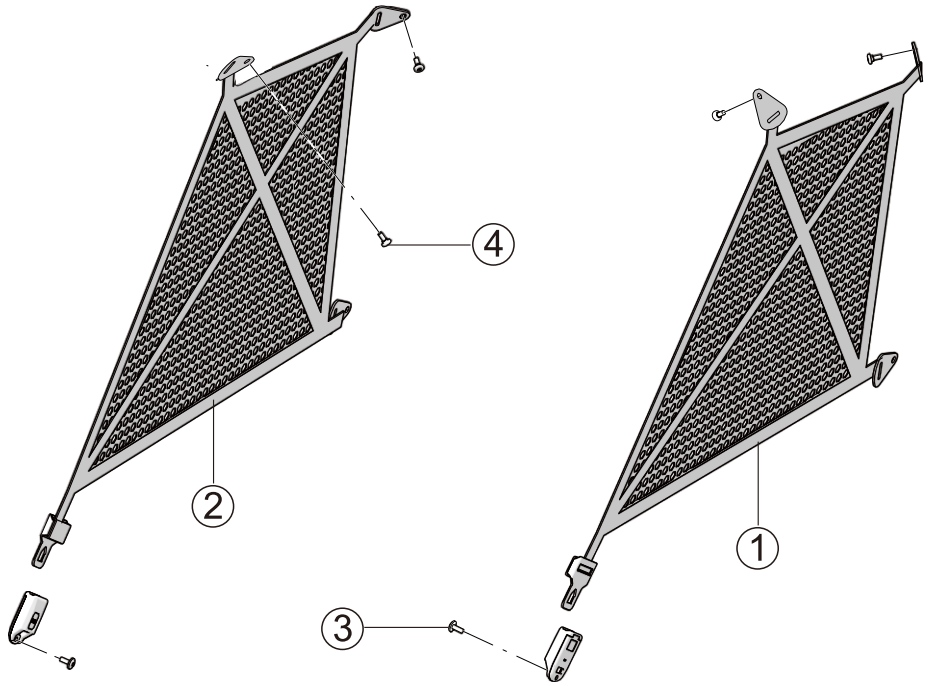

NO.	PART NAME	PART NUMBER	QUANTITY	REMARKS
1	Upper mesh assembly of left half door	U01R53000001	1	UTV（Half door）
2	Upper mesh assembly of right half door	U01R53100001	1	UTV（Half door）
3	Hexagon socket bolt with large pan head M6 × 16	T03000007002	2	
4	M6 step bolt	U01R53100002	4	


INSTALLATION OF HALF DOOR UPPER MESH ASSEMBLY

NOTE


This mesh is only available for half-door vehicles.

1. Align the half door mesh lock catch with themounting groove on the half door, and Hexagon socket bolt with large pan head M6 × 16.

Torque value: 8 ~15N·m (0.8~1.5kgf·m， 6~11ft·lb)

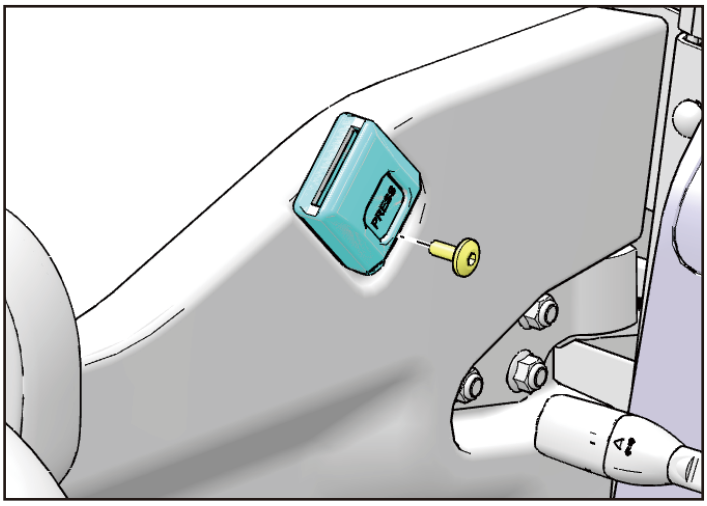

2. Insert the mesh buckle into the mesh lock catch.

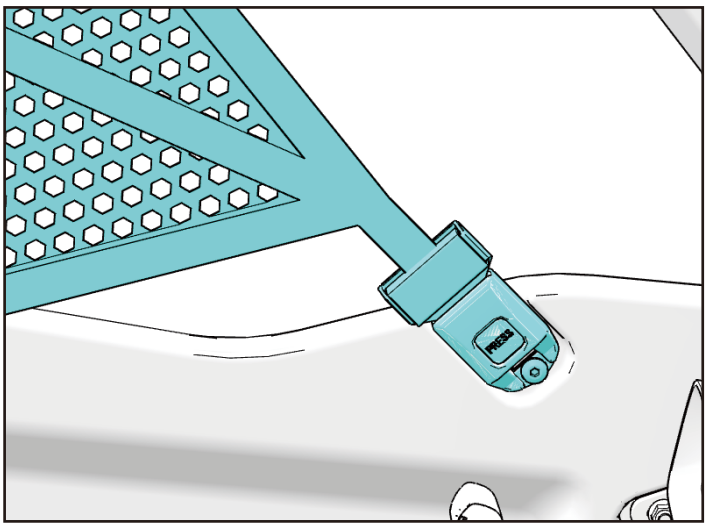

3. Install the fixing buckle on the mesh on thecorresponding position of the ceiling with the M6 step bolt, adjust the mesh, and then tighten the bolt.

Torque value : 8 ~15N·m (0.8~1.5kgf·m， 6~11ft·lb)

